

Product Information

Original Instructions



5012621905
PF525_2020-07

PowerFlex 525 Adjustable Frequency AC Drive

Catalog Number 25B

ATTENTION:

- Before installing, configuring, operating or maintaining this product, read this document and the documents listed in the Additional Resources section for installing, configuring, or operating equipment. Users should familiarize themselves with installation and wiring instructions in addition to requirements of all applicable codes, laws, and standards.
- Installation, adjustments, putting into service, use, assembly, disassembly, and maintenance shall be carried out by suitably trained personnel in accordance with applicable code of practice.
- If this equipment is used in a manner not specified by the manufacturer, the protection provided by the equipment may be impaired.
- Solid state equipment has operational characteristics differing from those of electromechanical equipment. Safety Guidelines for the Application, Installation and Maintenance of Solid State Controls, publication SGI-1.1, available from your local Rockwell Automation sales office or online at rok.auto/literature describes some important differences between solid state equipment and hard-wired electromechanical devices.

ATTENTION: Do not install, configure, operate or maintain this product until you have read the product documentation and the documents in the Additional Resources section for installing, configuring, operating or maintaining equipment. To get the product documentation go to rok.auto/literature or contact your local sales office or Rockwell Automation representative.

ATTENTION: Ne pas installer, configurer, exploiter ou maintenir ce produit tant que vous n'avez pas lu sa documentation et les documents de la rubrique Documents connexes pour l'installation, la configuration, l'exploitation et la maintenance de l'équipement. Pour obtenir de la documentation, rendez-vous sur le site rok.auto/literature ou contactez votre agence commerciale Rockwell Automation locale ou son représentant.

ACHTUNG: Für die Installation, Konfiguration, den Betrieb und die Wartung dieses Produkt lesen Sie sich bitte zunächst die Produktdokumentation sowie die Dokumente im Abschnitt "Weitere Informationen" durch. Die entsprechende Produktdokumentation finden Sie unter rok.auto/literature oder kontaktieren Sie Ihr lokales Vertriebsbüro bzw. einen Rockwell Automation-Mitarbeiter.

ATENCIÓN: No instale, configure, opere ni mantenga este producto hasta que haya leído la documentación del producto y los documentos en la sección Recursos adicionales para la instalación, configuración, operación o mantenimiento de equipo. Para conseguir la documentación, diríjase a rok.auto/literature o póngase en contacto con su oficina regional de ventas o representante de Rockwell Automation.

ATENÇÃO: Não instale, configure, opere ou mantenha este produto até que você leia a documentação do produto e os documentos na seção Recursos adicionais para a instalação, configuração, operação ou manutenção do equipamento. Para conseguir a documentação, visite rok.auto/literature ou entre em contato com seu escritório de vendas regional ou representante da Rockwell Automation.

ATTENZIONE: Non installare, configurare, attivare o riparare questo prodotto senza avere prima letto la relativa documentazione nonché i documenti indicati nella sezione Ulteriori Risorse riguardanti l'installazione, la configurazione, l'attivazione o la riparazione dell'apparecchiatura. Per la documentazione sul prodotto visitare il sito rok.auto/literature o contattare l'ufficio vendite o il rappresentante Rockwell Automation di zona.

注意: 製品の資料および追加資料に記載の装置の取付け、構成、操作、または保守に関する資料をお読みになるまでは、この製品の取付け、構成、操作、または保守を行なわないでください。製品の資料を入手するには、Webサイト: rok.auto/literature にアクセスするか、またはロックウェル・オートメーションの営業または販売代理店までご連絡ください。

주의사항: 제품 매뉴얼 혹은 설치, 구성, 가동, 유지와 관련된 추가 지침서를 완전히 숙지하기 전까지 본 제품을 설치 혹은 가동하지 마십시오. 본 제품과 관련된 매뉴얼 혹은 문서를 원하시면 사이트 rok.auto/literature 를 방문 해주거나 해당 지역의 로컬 오프에이전 대리점으로부터 하십시오.

注意: 若未阅读产品文档以及“其它资源”小节中提及的有关安装、配置、运行或维护设备的相关文档, 请勿安装、配置、运行或维护本产品。请访问 rok.auto/literature 或联系您当地的销售办事处或洛克韦尔自动化代表, 以获取产品文档。

注意: 在您完整閱讀本產品相關文件及其他關於安裝、配置、操作或維護設備等資料之前, 請勿安裝、配置、操作或維護此產品。您可到下列網站下載所有產品相關文件 rok.auto/literature, 或聯繫洛克威爾自動化當地辦公室。

ВНИМАНИЕ: Не устанавливайте, не конфигурируйте, не запускайте в эксплуатацию и не поддерживайте работу продукта до прочтения технической документации по продукту и документации в разделе Дополнительные материалы для инсталлирования, конфигурирования, запуска в эксплуатацию и поддержки работы продукта. Чтобы ознакомиться с документацией по продукту, перейдите по ссылке rok.auto/literature или свяжитесь с локальным офисом продаж или представителем Rockwell Automation.

UWAGA: Nie instaluj i nie uruchamij tego urządzenia dopóki nie zapoznasz się z instrukcją użytkownika produktu. Aby uzyskać dokumentację produktu przejdź do strony internetowej rok.auto/literature lub skontaktuj się z lokalnym biurem sprzedaży lub przedstawicielstwem firmy Rockwell Automation.

OPZORNENI: Neprovádějte instalaci, konfiguraci, provoz ani údržbu, pokud jste dosud nepřčetli dokumentaci k produktu a dokumenty obsažené v sekci Doplňující informace pro instalaci, konfiguraci, provoz a údržbu. Tuto dokumentaci můžete získat na rok.auto/literature nebo od obchodního zástupce společnosti Rockwell Automation.

Additional Resources

These documents contain additional information concerning the installation, programming, and application of the AC drive.

| Language | Description |
|-----------|--|
| English | The user manual is available in multiple languages at rok.auto/literature . Select publication language and type "520-UM001" in the search field. |
| Deutsch | Das Benutzerhandbuch steht in mehreren Sprachen unter rok.auto/literature zur Verfügung. Wählen Sie Ihre Sprache aus, und geben Sie „520-UM001“ in das Suchfeld ein. |
| Français | Le manuel utilisateur est disponible dans différentes langues à l'adresse suivante: rok.auto/literature . Sélectionner la langue puis taper « 520-UM001 » dans le champ de recherche. |
| Italiano | La manuale d'uso è disponibile in varie lingue sul sito rok.auto/literature . Selezionare la lingua desiderata e digitare "520-UM001" nel campo di ricerca. |
| Español | Puede encontrar el manual del usuario en varios idiomas en rok.auto/literature . Seleccione el idioma de publicación y escriba "520-UM001" en el campo de búsqueda. |
| Português | O manual de usuário está disponível em várias línguas em rok.auto/literature . Selecione a língua de publicação e entre com "520-UM001" no espaço de busca. |
| 한국의 | 사용자 매뉴얼 rok.auto/literature 에서 여러 언어로 사용할 수 있습니다. 출판 언어와 유형을 선택하십시오 "520-UM001" 검색 필드에 하십시오. |
| 中文 (简体) | 从以下网页可以获得用户手册的多种语言的版本: rok.auto/literature 。请选择出版物的语言,并在搜索栏输入 "520-UM001" 印。 |
| 日本 | ユーザーズマニュアルの多言語版はWebサイト rok.auto/literature にて入手できます。出版言語を選択し、検索フィールドに「520-UM001」とタイプしてください。 |
| Русский | Руководство пользователя на других языках можно найти по адресу rok.auto/literature . Выберите язык и введите в окне поиска «520-UM001». |
| 中文 (繁體) | 以下網頁提供使用手冊的多國語言版本: rok.auto/literature 。請選擇出版語言,並於搜尋欄輸入 "520-UM001" 即可。 |
| Česky | Uživatelská příručka je k dispozici ve více jazykových verzích na adrese rok.auto/literature . Zvolte jazyk publikace a do vstupního pole pro vyhledávání zadejte „520-UM001“. |
| Polski | Instrukcja obsługi dostępna jest w wielu językach na stronie rok.auto/literature . Wybrać język publikacji, w polu wyszukiwania wpisać "520-UM001". |

PowerFlex® 520-Series Adjustable Frequency AC Drive User Manual, publication [520-UM001](http://rok.auto/literature). Detailed information on the parameters and specifications of the PowerFlex 523 and PowerFlex 525 drives.

AC Drive Installation Considerations, publication [DRIVES-IN003](http://rok.auto/literature): Provides additional information needed to properly install PowerFlex AC drives.

Wiring and Grounding Guidelines for Pulse Width Modulated (PWM) AC Drives, publication [DRIVES-IN001](http://rok.auto/literature): Provides basic information needed to properly wire and ground PWM AC drives.

Industrial Automation Wiring and Grounding Guidelines, publication [1770-4.1](http://rok.auto/literature): Provides general guidelines for installing a Rockwell Automation industrial system.

Mounting Considerations


- Mount the drive upright on a flat, vertical and level surface.

| Frame | Screw Size | Screw Torque |
|-------|---------------|---------------------------------|
| A | M5 (#10...24) | 1.56...1.96 N·m (14...17 lb·in) |
| B | M5 (#10...24) | 1.56...1.96 N·m (14...17 lb·in) |
| C | M5 (#10...24) | 1.56...1.96 N·m (14...17 lb·in) |
| D | M5 (#10...24) | 2.45...2.94 N·m (22...26 lb·in) |
| E | M8 (5/16 in.) | 6.0...7.4 N·m (53...65 lb·in) |

- Protect the cooling fan by avoiding dust or metallic particles.
- Do not expose to a corrosive atmosphere.
- Protect from moisture and direct sunlight.

Minimum Mounting Clearances

Vertical mounting is shown. If mounting horizontally, apply same clearances plus 50 mm (2.0 in.) clearance from the top and bottom of enclosure to allow for proper airflow.

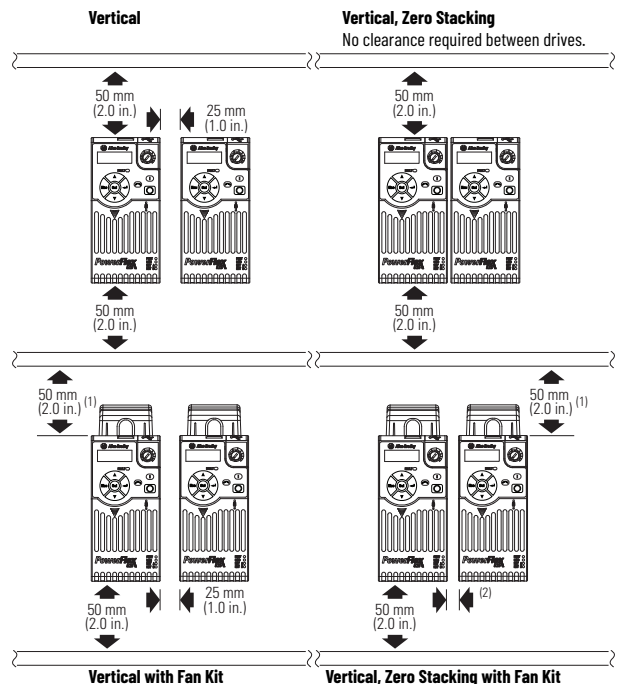

- (1) For Frame E with Fan Kit only, clearance of 95 mm (3.7 in.) is required.
 (2) For Frame E with Fan Kit only, clearance of 12 mm (0.5 in.) is required.

Ambient Operating Temperatures

| Mounting | Enclosure Rating ⁽¹⁾ | Ambient Temperature | | | |
|---|---------------------------------|---------------------|------------------|------------------------------|--|
| | | Min. | Max. (No Derate) | Max. (Derate) ⁽²⁾ | Max. with Fan Kit (Derate) ⁽³⁾⁽⁵⁾ |
| Vertical | IP 20/Open Type | -20 °C (-4 °F) | 50 °C (122 °F) | 60 °C (140 °F) | 70 °C (158 °F) |
| | IP 30/NEMA 1/UL Type 1 | | 45 °C (113 °F) | 55 °C (131 °F) | - |
| Vertical, Zero Stacking | IP 20/Open Type | -20 °C (-4 °F) | 45 °C (113 °F) | 55 °C (131 °F) | 65 °C (149 °F) |
| | IP 30/NEMA 1/UL Type 1 | | 40 °C (104 °F) | 50 °C (122 °F) | - |
| Horizontal with Control Module Fan Kit ⁽⁴⁾⁽⁵⁾ | IP 20/Open Type | -20 °C (-4 °F) | 50 °C (122 °F) | - | 70 °C (158 °F) |
| Horizontal, Zero Stacking with Control Module Fan Kit ⁽⁴⁾⁽⁵⁾ | IP 20/Open Type | | 45 °C (113 °F) | - | 65 °C (149 °F) |

- (1) IP 30/NEMA 1/UL Type 1 rating requires installation of the PowerFlex 520-Series IP 30/NEMA 1/UL Type 1 option kit, catalog number 25-JBAx.
 (2) For catalogs 25B-DIP4N104 and 25B-EOP9N104, the temperature listed under the Max. (Derate) column is reduced by 5 °C (9 °F) for all mounting methods.
 (3) For catalogs 25B-DIP4N104 and 25B-EOP9N104, the temperature listed under the Max. with Fan Kit (Derate) column is reduced by 10 °C (18 °F) for vertical and vertical with zero stacking mounting methods only.
 (4) Catalogs 25B-DIP4N104 and 25B-EOP9N104 cannot be mounted using either of the horizontal mounting methods.
 (5) Requires installation of the PowerFlex 520-Series Control Module Fan Kit, catalog number 25-FANx-70C.

Drive Dimensions


PowerFlex 525 Frames

Ratings are in kW and (HP).

| Frame | 1-Phase 100...120V | 1-Phase 200...240V | 1-Phase 200...240V w/ Filter | 3-Phase 200...240V | 3-Phase 380...480V | 3-Phase 380...480V w/ Filter | 3-Phase 525...600V |
|-------|------------------------|------------------------|------------------------------|---------------------------|---------------------------|------------------------------|---------------------------|
| A | 0.4 (0.5) | 0.4...0.75 (0.5...1.0) | 0.4...0.75 (0.5...1.0) | 0.4...2.2 (0.5...3.0) | 0.4...2.2 (0.5...3.0) | 0.4...2.2 (0.5...3.0) | 0.4...2.2 (0.5...3.0) |
| B | 0.75...1.1 (1.0...1.5) | 1.5...2.2 (2.0...3.0) | 1.5...2.2 (2.0...3.0) | 3.7 (5.0) | 4.0 (5.0) | 4.0 (5.0) | 3.7 (5.0) |
| C | - | - | - | 5.5 (7.5) | 5.5...7.5 (7.5...10.0) | 5.5...7.5 (7.5...10.0) | 5.5...7.5 (7.5...10.0) |
| D | - | - | - | 7.5 (10.0) | 11.0...15.0 (15.0...20.0) | 11.0...15.0 (15.0...20.0) | 11.0...15.0 (15.0...20.0) |
| E | - | - | - | 11.0...15.0 (15.0...20.0) | - | 18.5...22.0 (25.0...30.0) | 18.5...22.0 (25.0...30.0) |

IP20/Open Type


Dimensions are in mm and (in.). Weights are in kg and (lb).

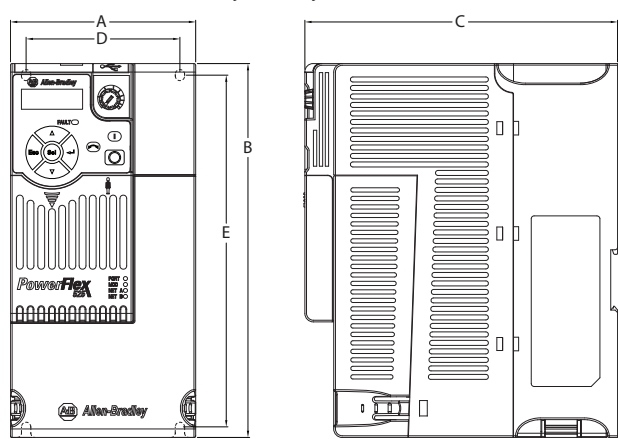

| Frame | A | B | C | D | E | Ship Weight |
|-------|------------|-------------|-------------|-------------|-------------|-------------|
| A | 72 (2.83) | 152 (5.98) | 172 (6.77) | 57.5 (2.26) | 140 (5.5) | 1.1 (2.4) |
| B | 87 (3.43) | 180 (7.09) | 172 (6.77) | 72.5 (2.85) | 168 (6.6) | 1.6 (3.5) |
| C | 109 (4.29) | 220 (8.66) | 184 (7.24) | 90.5 (3.56) | 207 (8.15) | 2.3 (5.0) |
| D | 130 (5.12) | 280 (10.24) | 212 (8.35) | 116 (4.57) | 247 (9.72) | 3.9 (8.6) |
| E | 185 (7.28) | 300 (11.81) | 279 (10.98) | 160 (6.30) | 280 (11.02) | 12.9 (28.4) |

EMC Filters

See the PowerFlex 525 User Manual for instructions on complying with the EMC Directive. Dimensions are in mm and (in.).

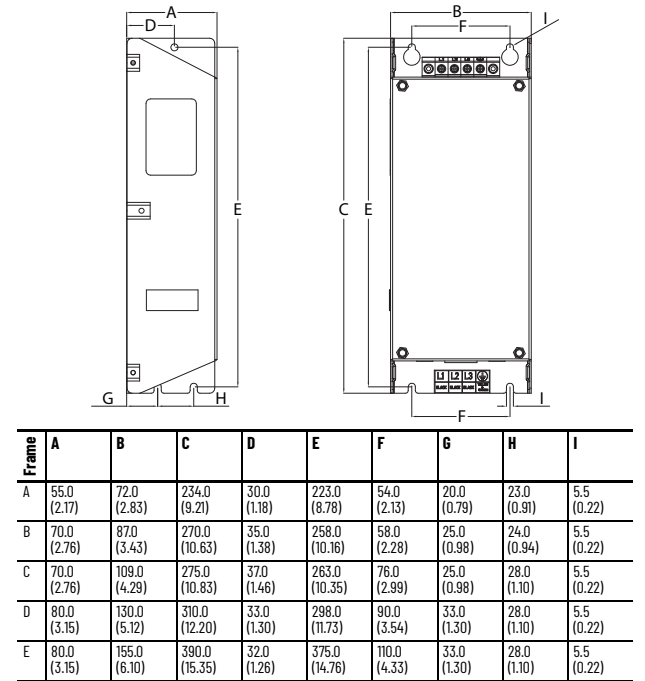


| Frame | A | B | C | D | E | F | G | H | I |
|-------|-------------|--------------|---------------|-------------|---------------|--------------|-------------|-------------|------------|
| A | 55.0 (2.17) | 72.0 (2.83) | 234.0 (9.21) | 30.0 (1.18) | 223.0 (8.78) | 54.0 (2.13) | 20.0 (0.79) | 23.0 (0.91) | 5.5 (0.22) |
| B | 70.0 (2.76) | 87.0 (3.43) | 270.0 (10.63) | 35.0 (1.38) | 258.0 (10.16) | 58.0 (2.28) | 25.0 (0.98) | 24.0 (0.94) | 5.5 (0.22) |
| C | 70.0 (2.76) | 87.0 (3.43) | 270.0 (10.63) | 35.0 (1.38) | 258.0 (10.16) | 58.0 (2.28) | 25.0 (0.98) | 24.0 (0.94) | 5.5 (0.22) |
| D | 80.0 (3.15) | 130.0 (5.12) | 310.0 (12.20) | 33.0 (1.30) | 298.0 (11.73) | 90.0 (3.54) | 33.0 (1.30) | 28.0 (1.10) | 5.5 (0.22) |
| E | 80.0 (3.15) | 155.0 (6.10) | 390.0 (15.35) | 32.0 (1.26) | 375.0 (14.76) | 110.0 (4.33) | 33.0 (1.30) | 28.0 (1.10) | 5.5 (0.22) |

Fuses and Circuit Breakers


| Catalog No. ⁽¹⁾ | Output Ratings | | | | Input Ratings | | Branch Circuit Protection | | | IP20/Open Type | Watts Loss | |
|--|----------------|---------------|------|------|---------------|-------------------|--|--|------------|----------------|------------|-------|
| | Normal Duty HP | Heavy Duty kW | HP | kW | Amps | Voltage Range kVA | Max Amps ⁽²⁾ Fuse Ratings Min./Max. | 140M Motor Protectors ⁽³⁾ (4) (5) | Contactors | | | |
| 100...120V AC (-15%, +10%) - 1-Phase Input, 0...230V 3-Phase Output | | | | | | | | | | | | |
| 25B-V2PSN104 | 0.5 | 0.4 | 0.5 | 0.4 | 2.5 | 85...132 | 1.3 | 9.6 | 16/20 | 140M-C2E-C10 | 100-C12 | 27.0 |
| 25B-V4P8N104 | 1.0 | 0.75 | 1.0 | 0.75 | 4.8 | 85...132 | 2.5 | 19.2 | 25/40 | 140M-D8E-C20 | 100-C23 | 53.0 |
| 25B-V6P0N104 | 1.5 | 1.1 | 1.5 | 1.1 | 6.0 | 85...132 | 3.2 | 24.0 | 32/50 | 140M-F8E-C25 | 100-C23 | 67.0 |
| 200...240V AC (-15%, +10%) - 1-Phase Input, 0...230V 3-Phase Output | | | | | | | | | | | | |
| 25B-A2PSN104 | 0.5 | 0.4 | 0.5 | 0.4 | 2.5 | 170...264 | 1.7 | 6.5 | 10/16 | 140M-C2E-C10 | 100-C09 | 29.0 |
| 25B-A4P8N104 | 1.0 | 0.75 | 1.0 | 0.75 | 4.8 | 170...264 | 2.8 | 10.7 | 16/25 | 140M-C2E-C16 | 100-C12 | 50.0 |
| 25B-A8P0N104 | 2.0 | 1.5 | 2.0 | 1.5 | 8.0 | 170...264 | 4.8 | 18.0 | 25/40 | 140M-F8E-C25 | 100-C23 | 81.0 |
| 25B-A01N104 | 3.0 | 2.2 | 3.0 | 2.2 | 11.0 | 170...264 | 6.0 | 22.9 | 32/50 | 140M-F8E-C25 | 100-C37 | 111.0 |
| 200...240V AC (-15%, +10%) - 1-Phase Input with EMC Filter, 0...230V 3-Phase Output | | | | | | | | | | | | |
| 25B-A2PSN104 | 0.5 | 0.4 | 0.5 | 0.4 | 2.5 | 170...264 | 1.7 | 6.5 | 10/16 | 140M-C2E-C10 | 100-C09 | 29.0 |
| 25B-A4P8N104 | 1.0 | 0.75 | 1.0 | 0.75 | 4.8 | 170...264 | 2.8 | 10.7 | 16/25 | 140M-C2E-C16 | 100-C12 | 53.0 |
| 25B-A8P0N104 | 2.0 | 1.5 | 2.0 | 1.5 | 8.0 | 170...264 | 4.8 | 18.0 | 25/40 | 140M-F8E-C25 | 100-C23 | 84.0 |
| 25B-A01N104 | 3.0 | 2.2 | 3.0 | 2.2 | 11.0 | 170...264 | 6.0 | 22.9 | 32/50 | 140M-F8E-C25 | 100-C37 | 116.0 |
| 200...240V AC (-15%, +10%) - 3-Phase Input, 0...230V 3-Phase Output | | | | | | | | | | | | |
| 25B-B2PSN104 | 0.5 | 0.4 | 0.5 | 0.4 | 2.5 | 170...264 | 1.2 | 2.7 | 6/6 | 140M-C2E-B40 | 100-C09 | 29.0 |
| 25B-B5P0N104 | 1.0 | 0.75 | 1.0 | 0.75 | 5.0 | 170...264 | 2.7 | 5.8 | 10/16 | 140M-C2E-B63 | 100-C09 | 50.0 |
| 25B-B8P0N104 | 2.0 | 1.5 | 2.0 | 1.5 | 8.0 | 170...264 | 4.3 | 9.5 | 16/20 | 140M-C2E-C10 | 100-C12 | 79.0 |
| 25B-B01N104 | 3.0 | 2.2 | 3.0 | 2.2 | 11.0 | 170...264 | 6.3 | 13.8 | 20/32 | 140M-C2E-C16 | 100-C23 | 107.0 |
| 25B-B017N104 | 5.0 | 3.7 | 5.0 | 3.7 | 17.5 | 170...264 | 9.6 | 21.1 | 32/45 | 140M-F8E-C25 | 100-C23 | 148.0 |
| 25B-B024N104 | 7.5 | 5.5 | 7.5 | 5.5 | 24.0 | 170...264 | 12.2 | 26.6 | 35/63 | 140M-F8E-C25 | 100-C37 | 259.0 |
| 25B-B032N104 | 10.0 | 7.5 | 10.0 | 7.5 | 32.2 | 170...264 | 15.9 | 34.8 | 45/70 | 140M-F8E-C45 | 100-C43 | 323.0 |
| 25B-B048N104 | 15.0 | 11.0 | 15.0 | 11.0 | 48.3 | 170...264 | 20.1 | 44.0 | 63/90 | 140M-F8E-C45 | 100-C60 | 584.0 |
| 25B-B062N104 | 20.0 | 15.0 | 20.0 | 15.0 | 62.1 | 170...264 | 25.6 | 56.0 | 70/125 | 140M-F8E-C45 | 100-C72 | 708.0 |
| 380...480V AC (-15%, +10%) - 3-Phase Input with EMC Filter, 0...460V 3-Phase Output | | | | | | | | | | | | |
| 25B-D1P4N104 | 0.5 | 0.4 | 0.5 | 0.4 | 1.4 | 323...528 | 1.7 | 1.9 | 3/6 | 140M-C2E-B25 | 100-C09 | 27.0 |
| 25B-D2P3N104 | 1.0 | 0.75 | 1.0 | 0.75 | 2.3 | 323...528 | 2.9 | 3.2 | 6/10 | 140M-C2E-B40 | 100-C09 | 37.0 |
| 25B-D4P0N104 | 2.0 | 1.5 | 2.0 | 1.5 | 4.0 | 323...528 | 5.2 | 5.7 | 10/16 | 140M-C2E-B63 | 100-C09 | 81.0 |
| 25B-D6P0N104 | 3.0 | 2.2 | 3.0 | 2.2 | 6.0 | 323...528 | 6.9 | 7.5 | 10/16 | 140M-C2E-C10 | 100-C09 | 98.0 |
| 25B-D010N104</ | | | | | | | | | | | | |

Power Terminal Block

Frame A, B, C and D

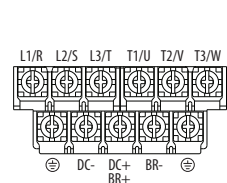

Frame E

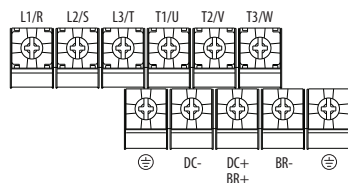

| Terminal | Description |
|------------------|---|
| L1/R, L2/S, L3/T | Input Line Voltage Connection |
| T1/U, T2/V, T3/W | Motor Phase Connection Switch any two motor leads to change forward direction. |
| DC+, DC- | DC Bus Connection |
| BR+, BR- | Dynamic Brake Resistor Connection |
| ⊖ | Safety Ground - PE |

IMPORTANT Terminal screws may become loose during shipment. Ensure that all terminal screws are tightened to the recommended torque before applying power to the drive.


Power Terminal Block Specifications

| Frame | Maximum Wire Size ⁽¹⁾ | Minimum Wire Size ⁽¹⁾ | Torque |
|-------|----------------------------------|----------------------------------|-------------------------------------|
| A | 5.3 mm ² (10 AWG) | 0.8 mm ² (18 AWG) | 1.76...2.16 Nm (15.6...19.1 lb-in.) |
| B | 8.4 mm ² (8 AWG) | 2.1 mm ² (14 AWG) | 1.76...2.16 Nm (15.6...19.1 lb-in.) |
| C | 8.4 mm ² (8 AWG) | 2.1 mm ² (14 AWG) | 1.76...2.16 Nm (15.6...19.1 lb-in.) |
| D | 13.3 mm ² (6 AWG) | 5.3 mm ² (10 AWG) | 1.76...2.16 Nm (15.6...19.1 lb-in.) |
| E | 26.7 mm ² (3 AWG) | 8.4 mm ² (8 AWG) | 3.09...3.77 Nm (27.3...33.4 lb-in.) |

⁽¹⁾ Maximum/minimum sizes that the terminal block will accept - these are not recommendations.

Control Terminal Block


Control I/O Wiring Block Diagram

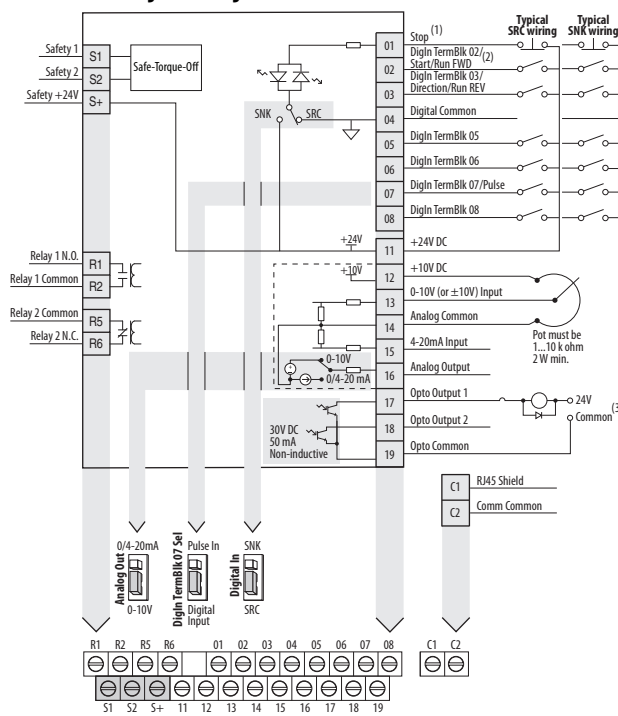

IMPORTANT I/O Terminal 01 is always a stop input. The stopping mode is determined by the drive setting. The drive is shipped with a jumper installed between I/O Terminals 01 and 11. Remove this jumper when using I/O Terminal 01 as a stop or enable input.

⁽²⁾ Two wire control shown. For three wire control use a momentary input on I/O Terminal 02 to command a start. Use a maintained input for I/O Terminal 03 to change direction.
⁽³⁾ When using an opto output with an inductive load such as a relay, install a recovery diode parallel to the relay as shown, to prevent damage to the output.

General Grounding Requirements

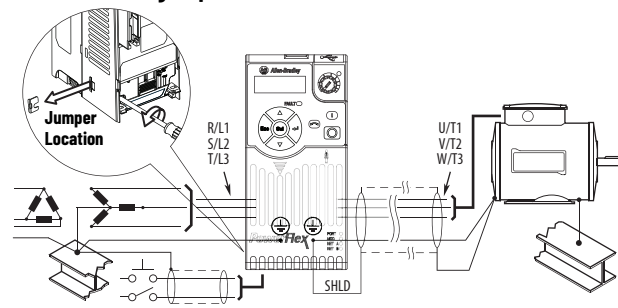


IMPORTANT The MOV to ground jumper must be removed if the drive is installed on an ungrounded (IT mains) or resistive grounded distribution system. Tighten screw after jumper removal.

Prepare For Drive Start-Up

ATTENTION: Power must be applied to the drive to perform the following start-up procedures. Some of the voltages present are at incoming line potential. To avoid electric shock hazard or damage to equipment, only qualified service personnel should perform the following procedure. Thoroughly read and understand the procedure before beginning. If an event does not occur while performing this procedure, **Do Not Proceed. Remove All Power** including user supplied control voltages. User supplied voltages may exist even when main AC power is not applied to the drive. Correct the malfunction before continuing.

LCD Display with QuickView Technology

QuickView® technology enables text to scroll across the LCD display of the PowerFlex 520-series drive. This allows you to easily configure parameters, troubleshoot faults and view diagnostic items without using a separate device.

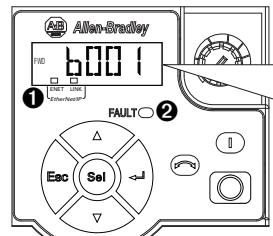

| No. | Display/LED (Color) |
|-----|--|
| 1 | ENET (Steady) - Adapter connected to network and drive controlled via Ethernet. ENET (Flashing) - Adapter connected to network but drive not controlled via Ethernet. LINK (Steady) - Adapter connected to network but not transmitting data. LINK (Flashing) - Adapter connected to network and transmitting data. |
| 2 | Fault Status (Red) |

AppView Parameter Groups

The parameters in the AppView® parameter groups can be quickly added to the CustomView™ parameter group by doing the following:

| Step | Key(s) | Example Displays |
|--|----------|------------------|
| 1. Press the Up Arrow or Down Arrow to scroll to an AppView group (G1..G8). | ▲ or ▼ | G1031 |
| 2. Press Enter or Sel to enter a group. The rightmost digit of the last viewed parameter in that group will flash. | ↵ or Sel | G1031 |
| 3. Press the Up Arrow or Down Arrow to scroll to the command G1-->C. | ▲ or ▼ | G1031 |
| 4. Press Enter or Sel to add all the parameters in this AppView group to the CustomView group. The LCD display will show a confirmation. | ↵ or Sel | ██████ |

CustomView Parameter Group

You can copy one entire AppView parameter group to the CustomView parameter group as shown above or add individual parameters as shown below.

| Step | Key(s) | Example Displays |
|--|--------|------------------|
| 1. Press the Up Arrow or Down Arrow to scroll to the CustomView group (GC). | ▲ or ▼ | GC+++ |
| 2. Press Enter to view the parameters that can be added to the CustomView group. | ↵ | +++01 |
| 3. Press the Up Arrow or Down Arrow to scroll through the list of parameters. | ▲ or ▼ | +++02 |
| 4. Press Enter to add the parameter to the CustomView group. The LCD display will show a confirmation. | ↵ | ██████ |

To delete parameters from the CustomView parameter group:

| Step | Key(s) | Example Displays |
|---|----------|------------------|
| 1. Press the Up Arrow or Down Arrow to scroll to the CustomView group (GC). | ▲ or ▼ | GC002 |
| 2. Press Enter to view the parameters that are in the CustomView group. | ↵ | GC002 |
| 3. Press the Up Arrow or Down Arrow to scroll to the command GC--> | ▲ or ▼ | GC--> |
| 4. Press Enter or Sel to view the parameters that are stored in the CustomView group. | ↵ or Sel | -->002 |
| 5. Press the Up Arrow or Down Arrow to scroll through the list of parameters. | ▲ or ▼ | -->002 |
| 6. Press Enter to delete the parameter from the CustomView group. The LCD display will show a confirmation. | ↵ | ██████ |

Fault Codes

To clear a fault - press the Stop key if P045 [Stop Mode] is set to a value between 0...3, cycle power, set A551 [Fault Clear] to 1 or 2, or cycle digital input if I062, I063, I065...I068 [DigIn TermBlk xx] is set to I3.

| No. | Fault | Description |
|---------------------|------------------|--|
| F000 | No Fault | - |
| F002 ⁽¹⁾ | Auxiliary Input | Check remote wiring. Verify communications programming for intentional fault. |
| F003 | Power Loss | Monitor the incoming AC line for low voltage or line power interruption. Check input fuses. Reduce load. |
| F004 ⁽¹⁾ | UnderVoltage | Monitor the incoming AC line for low voltage or line power interruption. |
| F005 ⁽¹⁾ | OverVoltage | Monitor the AC line for high line voltage or transient conditions. Bus overvoltage can also be caused by motor regeneration. Extend the decel time or install dynamic brake resistor. |
| F006 ⁽¹⁾ | Motor Stalled | Increase P041, A442, A444 or A446 [Accel Time x] or reduce load so drive output current does not exceed the current set by parameter A484 or A485 [Current Limit x]. Check for overhauling load. |
| F007 ⁽¹⁾ | Motor Overload | An excessive motor load exists. Reduce load so drive output current does not exceed the current set by parameter P033 [Motor OL Current]. Verify A530 [Boost Select] setting. |
| F008 ⁽¹⁾ | Heatsink OvrTmp | Check for blocked or dirty heat sink fins. Verify that ambient temperature has not exceeded the rated ambient temperature. Check fan. |
| F008 ⁽¹⁾ | CC OvrTmp | Check product ambient temperature. Check for airflow obstruction. Check for dirt or debris. Check Fan. |
| F012 | HW OverCurrent | Check programming. Check for excess load, improper A531 [Boost Select] setting, DC brake volts set too high or other causes of excess current. |
| F013 ⁽²⁾ | Ground Fault | Check the motor and external wiring to the drive output terminals for a grounded condition. |
| F015 | Load Loss | Verify connections between motor and load. Verify level and time requirements. |
| F027 ⁽¹⁾ | Output Ph Loss | Verify motor wiring and motor. |
| F028 ⁽¹⁾ | Analog In Loss | An analog input is configured to fault on a signal loss. A signal loss has occurred. Check for broken/loose connections at inputs. Check parameters. |
| F033 | Auto Rstrt Tries | Correct the cause of the fault and manually clear. |
| F038 | Phase U to Gnd | Check the wiring between the drive and motor. Check motor for grounded phase. |
| F039 | Phase V to Gnd | Replace drive if fault cannot be cleared. |
| F040 | Phase W to Gnd | Replace drive if fault cannot be cleared. |
| F041 | Phase UV Short | Check the motor and drive output terminal wiring for a shorted condition. |
| F042 | Phase UW Short | Replace drive if fault cannot be cleared. |
| F043 | Phase VW Short | Replace drive if fault cannot be cleared. |

| No. | Fault | Description |
|---------------------|-------------------|--|
| F046 ⁽¹⁾ | Params Defaulted | The drive was commanded to write default values to EEPROM. Clear the fault or cycle power to the drive. Program the drive parameters as needed. |
| F059 ⁽¹⁾ | Safety Open | Both of the safety inputs (Safety 1, Safety 2) are not enabled. Check safety input signals. If not using safety, verify and tighten jumper for I/O terminals S1, S2 and S+. |
| F063 ⁽¹⁾ | SW OverCurrent | Verify connections between motor and load. Verify level and time requirements. |
| F064 | Drive Overload | Reduce load or extend Accel Time. |
| F070 | Power Unit | Check maximum ambient temperature has not been exceeded. Cycle power. Replace drive if fault cannot be cleared. |
| F071 | DSI Net Loss | Cycle power. Check communications cabling. Check Modbus or DSI setting. |
| F072 | Opt Net Loss | Cycle power. Check communications cabling. Check network adapter setting. Check external network status. |
| F073 | EN Net Loss | Cycle power. Check communications cabling. Check EtherNet/IP™ setting. Check external network status. |
| F080 | Autotune Failure | The autotune function was either cancelled by the user or failed. Restart procedure. |
| F081 | DSI Comm Loss | Cycle power. Check communications cabling. Check Modbus or DSI setting. Check Modbus or DSI status. Modify using C125 [Comm Loss Action]. Connecting I/O terminals C1 and C2 to ground may improve noise immunity. Replace wiring. Modbus master device or control module. |
| F082 | Opt Comm Loss | Cycle power. Reinstall option card in drive. Modify using C125 [Comm Loss Action]. Replace wiring, port expander, option card or control module. |
| F083 | EN Comm Loss | Cycle power. Check EtherNet/IP setting. Check drive's Ethernet settings and diagnostic parameters. Modify using C125 [Comm Loss Action]. Replace wiring. Ethernet switch or control module. |
| F091 | Encoder Loss | Check Wiring: If P047, P049 or P051 [Speed Reference] = 16 "Positioning" and A535 [Motor Fdbk Type] = 5 "Dual Check", swap the Encoder channel inputs or swap any two motor leads. Replace encoder. |
| F094 | Function Loss | Close input to the terminal and cycle power. |
| F100 | Parameter Chksum | Set P053 [Reset to Defaults] to 2 "Factory Rset". |
| F101 | External Storage | Set P053 [Reset to Defaults] to 2 "Factory Rset". |
| F105 | C Connect Err | Clear fault and verify all parameter settings. Do not remove or install the control module while power is applied. |
| F106 | Incompat C-P | The control module could not recognize the power module. Cycle power. Flash with newer firmware version. Replace drive if fault cannot be cleared. |
| F107 | Replaced C-P | The control module was mounted to a power module with a different power rating. Set P053 [Reset to Defaults] to any of the reset options. |
| F109 | Mismatch C-P | The control module was mounted to a different drive type power module. Set P053 [Reset to Defaults] to any of the reset options. |
| F110 | Keypad Membrane | Keypad membrane failure/disconnected. Cycle power. Replace control module if fault cannot be cleared. |
| F111 | Safety Hardware | Safety input enable hardware malfunction. One of the safety inputs is not enabled. Check safety input signals. If not using safety, verify and tighten jumper for I/O terminals S1, S2 and S+. |
| F114 | uC Failure | Cycle power. Replace control module if fault cannot be cleared. |
| F122 | I/O Board Fail | Cycle power. Replace drive or control module if fault cannot be cleared. |
| F125 | Flash Update Req | Perform a firmware flash update operation to attempt to load a valid set of firmware. |
| F126 | NonRecoverableErr | Clear fault or cycle power to the drive. Replace drive or control module if fault cannot be cleared. |
| F127 | DSIFlashUpdatReq | Perform a firmware flash update operation using DSI communications to attempt to load a valid set of firmware. |

⁽¹⁾ This fault may be cleared by the auto-restart routine and will be attempted a number of times based on the value set in parameter A541 [Auto Rstrt Tries].
⁽²⁾ This fault may be cleared by the auto-restart routine and will be attempted only once. It ignores the value set in parameter A541 [Auto Rstrt Tries].

Specifications

| Input/Output Ratings | Approvals |
|---|---|
| Output Frequency: 0...500 Hz (Programmable) | UL 508C, CSA 22.2, N223, IEC 60947-4-1, EN 60947-4-1, EN 60947-3, ATEX Directive 2006/42/EC: EN 60261, RoHS Directive 2011/65/EU: EN 50495, Low Voltage TP TC 004/2011, EMC TP TC 020/2011 |
| Efficiency: 97.5% (Typical) | CE, EAC, KCC: Article 58-2 of Radio Waves Act, Clause 3, Lloyd's Register: Approval Certificate 12/10068(E1) |
| Digital Control Inputs (Input Current = 6 mA) | UL 157, IEC 60947-5-1, EN 60947-5-1, EN 60947-5-2, EN 60947-5-3, EN 60947-5-4, EN 60947-5-5, EN 60947-5-6, EN 60947-5-7, EN 60947-5-8, EN 60947-5-9, EN 60947-5-10, EN 60947-5-11, EN 60947-5-12, EN 60947-5-13, EN 60947-5-14, EN 60947-5-15, EN 60947-5-16, EN 60947-5-17, EN 60947-5-18, EN 60947-5-19, EN 60947-5-20, EN 60947-5-21, EN 60947-5-22, EN 60947-5-23, EN 60947-5-24, EN 60947-5-25, EN 60947-5-26, EN 60947-5-27, EN 60947-5-28, EN 60947-5-29, EN 60947-5-30, EN 60947-5-31, EN 60947-5-32, EN 60947-5-33, EN 60947-5-34, EN 60947-5-35, EN 60947-5-36, EN 60947-5-37, EN 60947-5-38, EN 60947-5-39, EN 60947-5-40, EN 60947-5-41, EN 60947-5-42, EN 60947-5-43, EN 60947-5-44, EN 60947-5-45, EN 60947-5-46, EN 60947-5-47, EN 60947-5-48, EN 60947-5-49, EN 60947-5-50, EN 60947-5-51, EN 60947-5-52, EN 60947-5-53, EN 60947-5-54, EN 60947-5-55, EN 60947-5-56, EN 60947-5-57, EN 60947-5-58, EN 60947-5-59, EN 60947-5-60, EN 60947-5-61, EN 60947-5-62, EN 60947-5-63, EN 60947-5-64, EN 60947-5-65, EN 60947-5-66, EN 60947-5-67, EN 60947-5-68, EN 60947-5-69, EN 60947-5-70, EN 60947-5-71, EN 60947-5-72, EN 60947-5-73, EN 60947-5-74, EN 60947-5-75, EN 60947-5-76, EN 60947-5-77, EN 60947-5-78, EN 60947-5-79, EN 60947-5-80, EN 60947-5-81, EN 60947-5-82, EN 60947-5-83, EN 60947-5-84, EN 60947-5-85, EN 60947-5-86, EN 60947-5-87, EN 60947-5-88, EN 60947-5-89, EN 60947-5-90, EN 60947-5-91, EN 60947-5-92, EN 60947-5-93, EN 60947-5-94, EN 60947-5-95, EN 60947-5-96, EN 60947-5-97, EN 60947-5-98, EN 60947-5-99, EN 60947-5-100 |
| Analog Control Inputs | UL 157, IEC 60947-5-1, EN 60947-5-1, EN 60947-5-2, EN 60947-5-3, EN 60947-5-4, EN 60947-5-5, EN 60947-5-6, EN 60947-5-7, EN 60947-5-8, EN 60947-5-9, EN 60947-5-10, EN 60947-5-11, EN 60947-5-12, EN 60947-5-13, EN 60947-5-14, EN 60947-5-15, EN 60947-5-16, EN 60947-5-17, EN 60947-5-18, EN 60947-5-19, EN 60947-5-20, EN 60947-5-21, EN 60947-5-22, EN 60947-5-23, EN 60947-5-24, EN 60947-5-25, EN 60947-5-26, EN 60947-5-27, EN 60947-5-28, EN 60947-5-29, EN 60947-5-30, EN 60947-5-31, EN 60947-5-32, EN 60947-5-33, EN 60947-5-34, EN 60947-5-35, EN 60947-5-36, EN 60947-5-37, EN 60947-5-38, EN 60947-5-39, EN 60947-5-40, EN 60947-5-41, EN 60947-5-42, EN 60947-5-43, EN 60947-5-44, EN 60947-5-45, EN 60947-5-46, EN 60947-5-47, EN 60947-5-48, EN 60947-5-49, EN 60947-5-50, EN 60947-5-51, EN 60947-5-52, EN 60947-5-53, EN 60947-5-54, EN 60947-5-55, EN 60947-5-56, EN 60947-5-57, EN 60947-5-58, EN 60947-5-59, EN 60947-5-60, EN 60947-5-61, EN 60947-5-62, EN 60947-5-63, EN 60947-5-64, EN 60947-5-65, EN 60947-5-66, EN 60947-5-67, EN 60947-5-68, EN 60947-5-69, EN 60947-5-70, EN 60947-5-71, EN 60947-5-72, EN 60947-5-73, EN 60947-5-74, EN 60947-5-75, EN 60947-5-76, EN 60947-5-77, EN 60947-5-78, EN 60947-5-79, EN 60947-5-80, EN 60947-5-81, EN 60947-5-82, EN 60947-5-83, EN 60947-5-84, EN 60947-5-85, EN 60947-5-86, EN 60947-5-87, EN 60947-5-88, EN 60947-5-89, EN 60947-5-90, EN 60947-5-91, EN 60947-5-92, EN 60947-5-93, EN 60947-5-94, EN 60947-5-95, EN 60947-5-96, EN 60947-5-97, EN 60947-5-98, EN 60947-5-99, EN 60947-5-100 |
| Control Output | UL 157, IEC 60947-5-1, EN 60947-5-1, EN 60947-5-2, EN 60947-5-3, EN 60947-5-4, EN 60947-5-5, EN 60947-5-6, EN 60947-5-7, EN 60947-5-8, EN 60947-5-9, EN 60947-5-10, EN 60947-5-11, EN 60947-5-12, EN 60947-5-13, EN 60947-5-14, EN 60947-5-15, EN 60947-5-16, EN 60947-5-17, EN 60947-5-18, EN 60947-5-19, EN 60947-5-20, EN 60947-5-21, EN 60947-5-22, EN 60947-5-23, EN 60947-5-24, EN 60947-5-25, EN 60947-5-26, EN 60947-5-27, EN 60947-5-28, EN 60947-5-29, EN 60947-5-30, EN 60947-5-31, EN 60947-5-32, EN 60947-5-33, EN 60947-5-34, EN 60947-5-35, EN 60947-5-36, EN 60947-5-37, EN 60947-5-38, EN 60947-5-39, EN 60947-5-40, EN 60947-5-41, EN 60947-5-42, EN 60947-5-43, EN 60947-5-44, EN 60947-5-45, EN 60947-5-46, EN 60947-5-47, EN 60947-5-48, EN 60947-5-49, EN 60947-5-50, EN 60947-5-51, EN 60947-5-52, EN 60947-5-53, EN 60947-5-54, EN 60947-5-55, EN 60947-5-56, EN 60947-5-57, EN 60947-5-58, EN 60947-5-59, EN 60947-5-60, EN 60947-5-61, EN 60947-5-62, EN 60947-5-63, EN 60947-5-64, EN 60947-5-65, EN 60947-5-66, EN 60947-5-67, EN 60947-5-68, EN 60947-5-69, EN 60947-5-70, EN 60947-5-71, EN 60947-5-72, EN 60947-5-73, EN 60947-5-74, EN 60947-5-75, EN 60947-5-76, EN 60947-5-77, EN 60947-5-78, EN 60947-5-79, EN 60947-5-80, EN 60947-5-81, EN 60947-5-82, EN 60947-5-83, EN 60947-5-84, EN 60947-5-85, EN 60947-5-86, EN 60947-5-87, EN 60947-5-88, EN 60947-5-89, EN 60947-5-90, EN 60947-5-91, EN 60947-5-92, EN 60947-5-93, EN 60947-5-94, EN 60947-5-95, EN 60947-5-96, EN 60947-5-97, EN 60947-5-98, EN 60947-5-99, EN 60947-5-100 |
| Fuses and Circuit Breakers | UL 157, IEC 60947-5-1, EN 60947-5-1, EN 60947-5-2, EN 60947-5-3, EN 60947-5-4, EN 60947-5-5, EN 60947-5-6, EN 60947-5-7, EN 60947-5-8, EN 60947-5-9, EN 60947-5-10, EN 60947-5-11, EN 60947-5-12, EN 60947-5-13, EN 60947-5-14, EN 60947-5-15, EN 60947-5-16, EN 60947-5-17, EN 60947-5-18, EN 60947-5-19, EN 60947-5-20, EN 60947-5-21, EN 60947-5-22, EN 60947-5-23, EN 60947-5-24, EN 60947-5-25, EN 60947-5-26, EN 60947-5-27, EN 60947-5-28, EN 60947-5-29, EN 60947-5-30, EN 60947-5-31, EN 60947-5-32, EN 60947-5-33, EN 60947-5-34, EN 60947-5-35, EN 60947-5-36, EN 60947-5-37, EN 60947-5-38, EN 60947-5-39, EN 60947-5-40, EN 60947-5-41, EN 60947-5-42, EN 60947-5-43, EN 60947-5-44, EN 60947-5-45, EN 60947-5-46, EN 60947-5-47, EN 60947-5-48, EN 60947-5-49, EN 60947-5-50, EN 60947-5-51, EN 60947-5-52, EN 60947-5-53, EN 60947-5-54, EN 60947-5-55, EN 60947-5-56, EN 60947-5-57, EN 60947-5-58, EN 60947-5-59, EN 60947-5-60, EN 60947-5-61, EN 60947-5-62, EN 60947-5-63, EN 60947-5-64, EN 60947-5-65, EN 60947-5-66, EN 60947-5-67, EN 60947-5-68, EN 60947-5-69, EN 60947-5-70, EN 60947-5-71, EN 60947-5-72, EN 60947-5-73, EN 60947-5-74, EN 60947-5-75, EN 60947-5-76, EN 60947-5-77, EN 60947-5-78, EN 60947-5-79, EN 60947-5-80, EN 60947-5-81, EN 60947-5-82, EN 60947-5-83, EN 60947-5-84, EN 60947-5-85, EN 60947-5-86, EN 60947-5-87, EN 60947-5-88, EN 60947-5-89, EN 60947-5-90, EN 60947-5-91, EN 60947-5-92, EN 60947-5-93, EN 60947-5-94, EN 60947-5-95, EN 60947-5-96, EN 60947-5-97, EN 60947-5-98, EN 60947-5-99, EN 60947-5-100 |
| Protective Features | UL 157, IEC 60947-5-1, EN 60947-5-1, EN 60947-5-2, EN 6094 |